



garden and landscaping products

## Assembly Instructions

### CWYE – Children's Picnic Table

#### *List of parts in fixings pack*

**4 x 95mm Connecting Bolts**

**4 x 60mm Connecting Bolts**

**8 x 25mm Connecting Caps**

**12 x 90mm Screws**

**4 x 60mm Screws**

**2 x Allen Keys**



When assembling, loosely fix together until fully assembled then tighten all the screws.

#### IMPORTANT CUSTOMER INFORMATION

To minimise twisting and warping all Hutton garden furniture products should only be used on firm level ground.

Softwood is a natural material which can twist and split during periods of wet/dry, hot/cold weather. If cracks do appear it is a natural occurrence and not a fault with the product or material. The best way to treat this is to use a cloth and rub a little PVA wood glue into the crack and once dry sand the area lightly.

This will not affect the treatment of the product.

1. Place the table top upside down on a flat surface taking care to protect the table top from scratching.
2. Take 1 leg (the shortest length of timber) and slot between the 2 braces at one end of the table. Leg should be placed so it splays away from the table. Loosely bolt with one 95mm bolt and connecting cap. Then repeat this for the other 3 legs.
3. Next take the seat rails and bolt them to the inside of the legs using the 60mm bolts. At this point all the bolts can be tightened.
4. Finally the seat boards can be screwed down using 60mm screws at the chamfered (narrow) end on the seat rails. The other 12 holes each should be affixed to the deeper part of the seat rails using the 90mm Screws.

**Hutton Garden and Landscaping Products**

Church Lane, Northwood Green, Westbury-on-Severn, Gloucestershire GL14 1ND [www.svw2000.co.uk/hutton](http://www.svw2000.co.uk/hutton)

**Tel: 01452 762089**

**Fax: 01452 760993**

**[sales@hutton-ltd.co.uk](mailto:sales@hutton-ltd.co.uk)**